

The London Organising Committee of the
Olympic Games and Paralympic Games Ltd.
23rd floor, One Churchill Place
Canary Wharf, London E14 5LN
Reception +44 (0) 203 2012 000
Fax +44 (0) 203 2012 001
london2012.com

ELECTRONIC KEY PAD

OPERATING INSTRUCTIONS

- The initial Manufacturer Code for the lock is set at '1111'
- Input a new User Code with the door open, and press '#' to confirm
- Close the door and use the new User Code to lock the door.
- If the password is correct, the Green LED shows, if not, the Yellow LED flickers
- Once locked, the Red LED will flash
- If an incorrect Code is inputted the Yellow LED will flash 4 times and a buzzer will sound
- If an incorrect Code is inputted 3 times the lock will freeze for 5 minutes
- If the battery is low, the Red Led will light up (not flash). Please change batteries
- If the batteries are flat, the VLM has an Emergency Pack that should be used to override the lock and open the door
- A Master Reset Code is available – please contact the LCC
- **Instruct users after use (post Event) to please leave door open and unlocked**
- Post Event for relocation of unit – Reset lock to '1111' and lock door for transport

NOTE: THE MASTER RESET CODES WE
HAVE BEEN GIVEN DON'T WORK.
SO PLEASE MAKE A NOTE ON
ANY CHANGE OF CODE